



# ИНСТРУКЦИИ ЗА РАБОТА С ДИСТАНЦИОННО УПРАВЛЕНИЕ



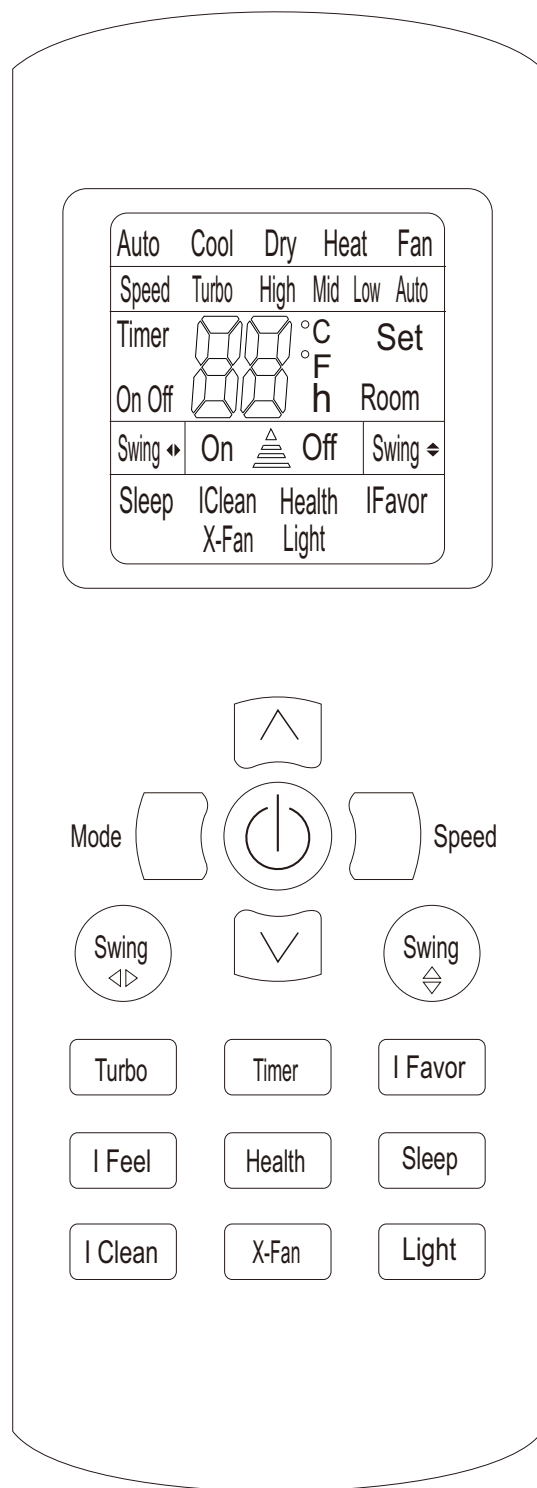


- За правилна и безопасна експлоатация на климатика прочетете внимателно тези инструкции.
- Пазете инструкциите на лесно достъпно място за да можете по всяко време да се консултирате с тях.

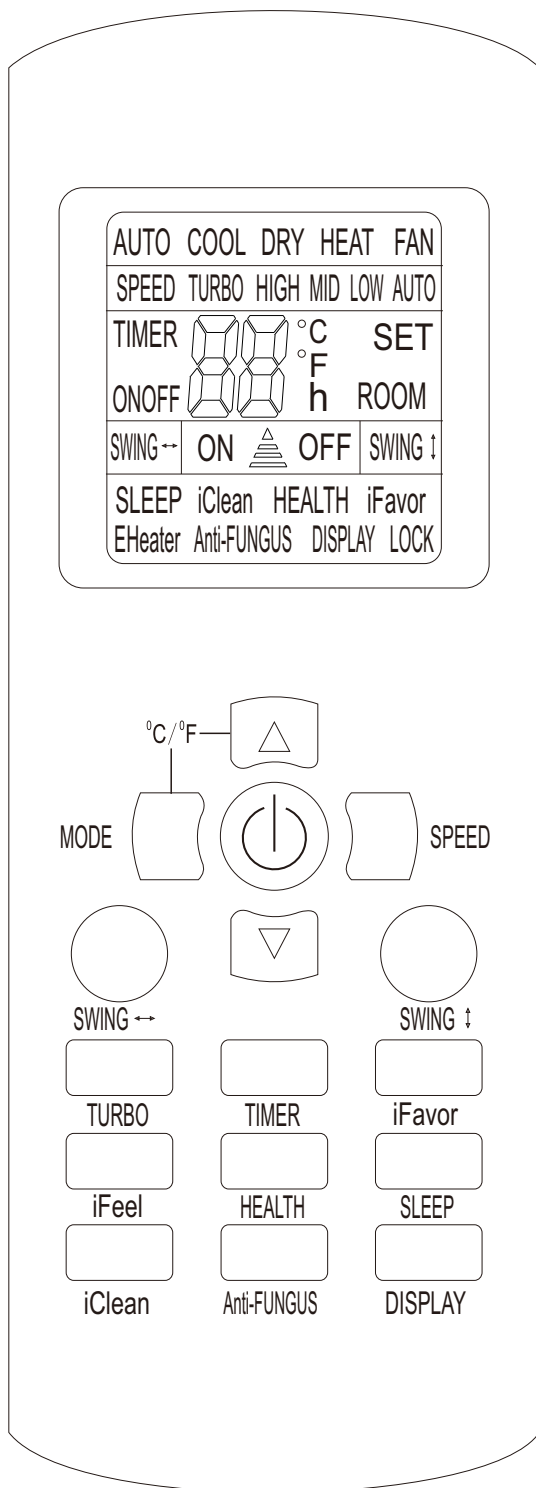

# Usage

## ★ Fix batteries

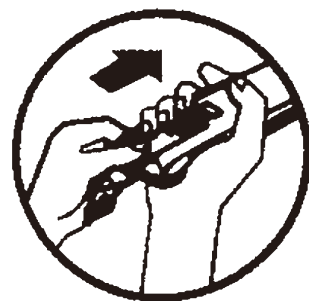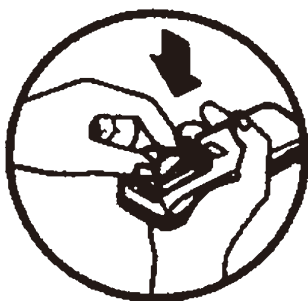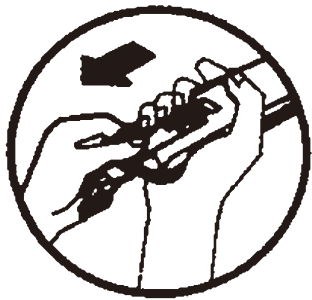

1. Slide open the cover according the direction indicated by arrowhead.
2. Put into two brand new batteries (7#), position the batteries to right electric poles (+ & -).
3. Put back the cover.

## ★ Automatic operation mode

1. Press the ON/OFF button, the air-conditioner starts to operate.
2. Press the MODE button, select the automatic operation mode.
3. Press the SPEED button, you can select fan speed.

You can select fan speed from LOW, MID, HIGH, AUTO.

4. Press the button again, the air-conditioner stops.

## ★ Cooling/Heating operation mode

**(cold wind type has no heating function)**

1. Press the ON/OFF button, the air-conditioner starts to operate.
2. Press the MODE button, select the Cooling or Heating operation mode.
3. Press the “ $\Delta(\wedge)$ ” or “ $\nabla(\vee)$ ” button, set the temperature, temperature can be set at 1°C difference range from 16-32°C.
4. Press the SPEED button, you can select fan speed. You can select fan speed from LOW, MID, HIGH, AUTO.
5. Press the button again, the air-conditioner stops.

## ★ Fan operation mode

1. Press the ON/OFF button, the air-conditioner starts to operate.
2. Press the MODE button, select the Cooling or Heating operation mode.
3. Press the SPEED button, you can select fan speed. You can select fan speed from LOW, MID, HIGH.
4. Press the button again, the air-conditioner stops.

**Remark: In the circulation operation mode, to set the temperature is noneffective.**

## ★ Drying operation mode

1. Press the ON/OFF button, the air-conditioner starts to operate.
  2. Press the MODE button, select the Dry operation mode.
  3. Press the “ $\Delta(\wedge)$ ” or “ $\nabla(\vee)$ ” button, set the temperature, temperature can be set at 1°C difference range from 16-32°C.
  4. Press the SPEED button, you can select fan speed.
- You can select fan speed from LOW, MID, HIGH, AUTO.
5. Press the button again, the air-conditioner stops.

### **Note:**

**This manual introduces function for all of the remote control, maybe you press one button without any reaction, well, the air-conditioner you bought hasn't this function.**

# Attention

1. Aim the remote controller towards the receiver on the air-conditioner.
2. The remote controller should be within 8 meters away from the receiver.
3. No obstacles between the remote controller and receiver.
4. Do not drop or throw the remote controller.
5. Do not put the remote controller under the forceful sunrays or heating facilities and other heating sources.
6. Use two 7# batteries, do not use the electric batteries.
7. Take the batteries out of remote controller before stop its using for long:
8. When the noise of transmitting signal can't be heard indoor unit or the transmission symbol on the display screen doesn't flare, batteries need be replaced.
9. If reset phenomenon occurs on pressing the button of the remote controller, the electric quantity is deficient and new batteries need to be substituted.
10. The waste battery should be disposed properly.